



**LEGEND**

- AC AUTOMATIC CUTOFF
- MC MANUAL CUTOFF
- PDN AIR FLOW SWITCH
- DS DISCONNECT SWITCH
- CONTACTOR COIL
- HEATING ELEMENT
- TR TRANSFORMER
- CONTACT NORMALLY OPEN
- FUSE

**WARNING:**  
Disconnect all supplies before working on this duct heater

**IMPORTANT:**  
Wire in according with electrical codes  
Use copper wire for 90°C minimum

**NOTE:**  
All wiring outside this frame are wiring by others